

1734 POINT 1/O Modules



Additional information about Rockwell Automation products.

	Cat. No	Description
General Information		DeviceNet Media (Media, Sensors and Distributed I/O) Catalog Guide DeviceNet Adapter Quick Start ControlNet Media EtherNet/IP Performance and Application Guide Industrial Automation Wiring and Grounding Guidelines Allen-Bradley Terminal Marking System Product Profile
	1734-ADN(X)	POINT I/O DeviceNet Adapter Module Installation Instructions POINT I/O DeviceNet Adapter Module User Manual
	1734-PDN	POINT I/O DeviceNet Communication Interface Module Installation Instructions
	1734-AENT	POINT I/O Ethernet Adapter Installation Instructions POINT I/O EtherNet/IP Communication Adapter Module User Manual
	1734-AENTR	POINT I/O 2 Port EtherNet/IP Adapter Installation Instructions POINT I/O 2 Port EtherNet/IP Adapter Installation Instructions
	1734-ACNR	POINT I/O ControlNet Adapter Installation Instructions POINT I/O ControlNet Adapter User Manual
Communication Interfaces	1734-APB	POINT I/O PROFIBUS Adapter Module Installation Instructions POINT I/O PROFIBUS Adapter Module User Manual
Digital and Analog	1734 Series	POINT I/O Digital and Analog Modules User Manual
4 Channel IO-Link Master	1734-4IOL	POINT I/O 4 Channel IO-Link Master Installation Instructions POINT I/O 4 Channel IO-Link Master Module User Manual
	1734-IA2 1734-IA4	120V AC 2 Input Module Installation Instructions
AC	1734-IM2 1734-IM4	220V AC 2 Input Module Installation Instructions
	1734-OA2 1734-OA4	120/220V AC 2 Output Module Installation Instructions
Serial Interface Modules	1734-232ASC 1734-485ASC	RS-232, -422, and -485 ASCII Modules Installation Instructions RS-232, -422, and -485 ASCII Modules User Manual
	1734-SSI	Synchronous Serial Interface Module with Absolute Encoder Installation Instructions Synchronous Serial Interface Module with Absolute Encoder User Manual
	1734-IK 1734-IJ	5V and 24V Encoder/Counter Modules Installation Instructions 5V and 24V Encoder/Counter Module User Manual
	1734-VHSC5 1734-VHSC24	5V and 24V DC Very High Speed Counter Module Installation Instructions 5V and 24V DC Very High Speed Counter Module User Manual

Additional information about Rockwell Automation products.

	Cat. No	Description
DC	1734-IB2 1734-IB4 1734-IB8	24V DC 2, 4, or 8 Input Sink Module Installation Instructions
	1734-IB4D	POINT I/O 24V DC 4-Channel Discrete Input Module Installation Instructions
	1734-IV2 1734-IV4 1734-IV8	24V DC 2, 4, or 8 Input Source Module Installation Instructions
	1734-OB2E 1734-OB4E 1734-OB8E	POINT I/O Protected Output Module Installation Instructions
	1734-OB2EP	POINT I/O Protected Output Module Installation Instructions
	1734-OB2 1734-OB4 1734-OB8	POINT I/O Protected Output Module Installation Instructions
	1734-OV2E 1734-OV4E 1734-OV8E	POINT I/O Protected Sink Output Module Installation Instructions
	1734-IE2C 1734-IE2V	POINT I/O 2 Current and 2 Voltage Input Analog Modules Installation Instructions
	1734-IE4C	POINT I/O 4 Channel High Density Current Input Module Installation Instructions
	1734-IE8C	POINT I/O 8 Channel High Density Current Input Module Installation Instructions
	1734-OE2C 1734-OE2V	24V DC Analog 2 Channel Current Output Module Installation Instructions
	1734-OE4C	POINT I/O 4 Channel Analog Current Output Module Installation Instructions
	1734-IR2 1734-IR2E 1734-IT2I	POINT I/O RTD and Isolated Thermocouple Input Modules Installation Instructions
Bases	1734-TB 1734-TBS	Wiring Base Assembly with 8 Point Cage-Clamp Removable Terminal Block Installation Instructions
	1734-TBS 1734-TB3S 1734-RTBS 1734-RTB3S	Wiring Base Assembly with 12 Point Cage-Clamp Removable Terminal Block Installation Instructions
	1734-TOP 1734-TOPS 1734-TOP3 1734-TOP3S	POINT I/O One-piece Terminal Bases Installation Instructions
	1734-TBCJC	Cold Junction Compensation Wiring Base Assembly Installation Instructions
	1734-FPD 1734-EP24DC 1734-EPAC	Field Potential Distributor Module Installation Instructions 24V DC Expansion Power Supply Installation Instructions 120/240V AC Expansion Power Supply Installation Instructions
Safety	1734-IB8S 1734-OB8S 1734-IE4S	POINT Guard I/O Safety Modules Installation and User Manual